

CABINET CONFIGURATION



ALPHA-LC800 Low Open Cabinet x 4
ALPHA-LGD Low Glass Door x 2
ALPHA-LD/WG Low Swinging Door
ALPHA-SP Shelf Panel x 3
ALPHA-LPH Low Pigeon Hole
ALPHA-TP1570 Top Panel for 2 cabinets x 2
ALPHA-CB Cabinet Base x 4




ALPHA-MC1210 Medium Open Shelf Cabinet x 2
ALPHA-LC800 Low Open Cabinet x 2
ALPHA-LD/WG Low Swinging Door
ALPHA-LPH Low Pigeon Hole
ALPHA-TP785 Top Panel x 2
ALPHA-TP1570 Top Panel for 2 Cabinet
ALPHA-CB Cabinet Base x 4



ALPHA-MC1210 Medium Open Shelf Cabinet x 3
ALPHA-MGD Medium Glass Door x 2
ALPHA-LD/SV Low Swinging Door
ALPHA-TP2355 Top Panel for 3 Cabinet
ALPHA-CB Cabinet Base x 3



ALPHA-MC1210 Medium Open Shelf Cabinet x 3
ALPHA-MD/WG Medium Swinging Door
ALPHA-LGD Low Glass Door x 2
ALPHA-TP2355 Top Panel for 3 Cabinet
ALPHA-CB Cabinet Base x 3

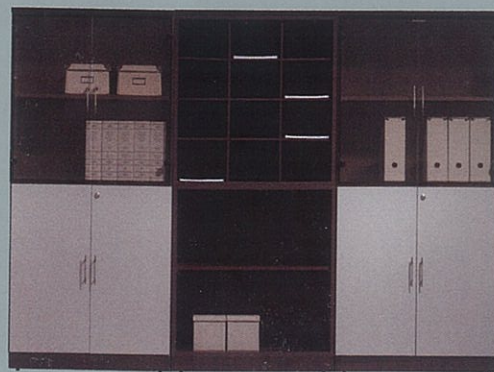


ALPHA-LC800 Low Open Cabinet x 6
ALPHA-LGD Low Glass Door x 2
ALPHA-LD/SV Low Swinging Door x 2
ALPHA-SP Shelf Panel x 5
ALPHA-LPH Low Pigeon Hole
ALPHA-TP2355 Top Panel for 3 Cabinet
ALPHA-CB Cabinet Base x 3




ALPHA-LC800 Low Open Cabinet x 6
ALPHA-LD/WG Low Swinging Door x 2
ALPHA-LGD Low Glass Door x 2
ALPHA-SP Shelf Panel x 6
ALPHA-TP785 Top Panel x 2
ALPHA-TP1570 Top Panel for 2 Cabinet
ALPHA-CB Cabinet Base x 4

CABINET FITTING SOLUTIONS


MEDIUM CABINET

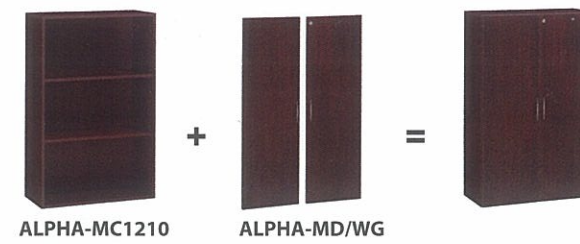


ALPHA-MC1210 + ALPHA-MD/WG =

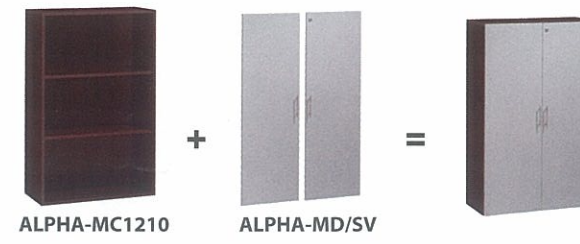


ALPHA-MC1210 + ALPHA-MD/SV =

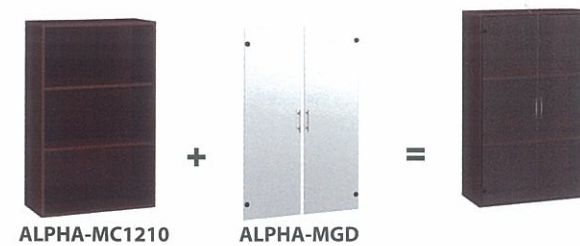


ALPHA-MC1210 + ALPHA-MGD =

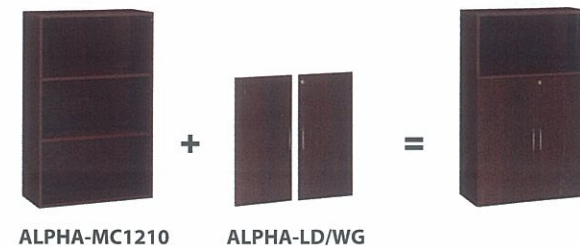


ALPHA-MC1210 + ALPHA-LD/WG =

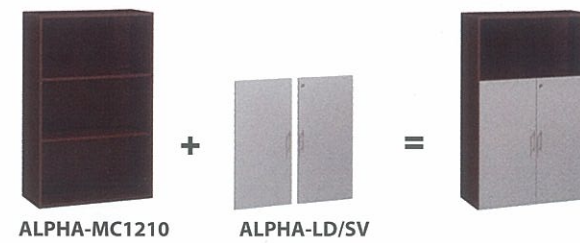

ALPHA-MC1210 + ALPHA-LD/SV =

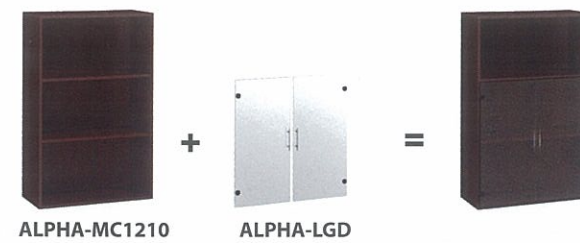


ALPHA-MC1210 + ALPHA-LGD =

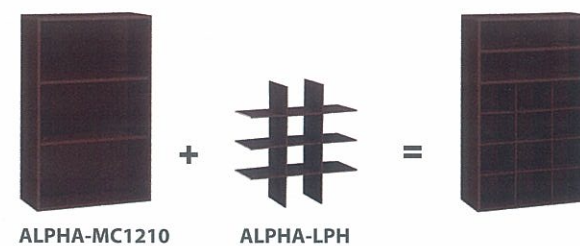


ALPHA-MC1210 + ALPHA-LPH =


LOW CABINET

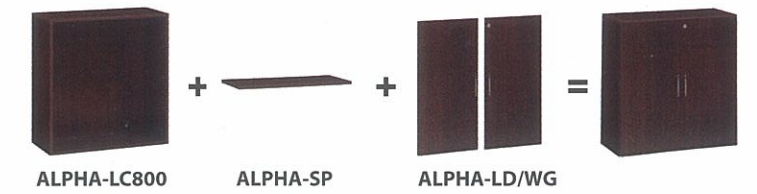

ALPHA-LC800 + ALPHA-SP + ALPHA-LD/WG =

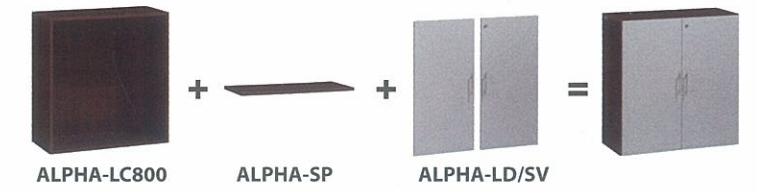

ALPHA-LC800 + ALPHA-SP + ALPHA-LD/SV =

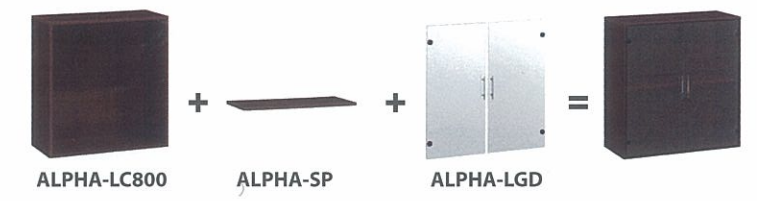

ALPHA-LC800 + ALPHA-SP + ALPHA-LGD =



ALPHA-LC800 + ALPHA-LPH =



ALPHA-LC800 + ALPHA-SP =